

## **CALL FORWARDING DON'T ANSWER-VARIABLE**

Call Forwarding Don't Answer- Variable allows you to dial a special code to forward incoming calls that are not answered within a designated number of rings to another preselected telephone number within your local calling area. The feature may be deactivated by dialing another special code. You specify the number of rings (normally four rings), and it is programmed in the Telephone Company's central office when your order is placed.

### **To Activate Call Forwarding Don't Answer-Variable:**

1. Press \*92 (1192 for rotary or dial pulse telephones).
2. Listen for beeps followed by dial tone.
3. Dial the forward-to number (within your local calling area).
4. Listen for beeps. (If you wish to notify the forward-to party of the Call Forwarding condition, hold the line and the call will be placed.)
5. Hang up.

### **To Deactivate Call Forwarding Don't Answer-Variable:**

1. Press \*93 (1193 for rotary or dial pulse telephones).
2. Listen for beeps.
3. Hang up.